PERFORMANCE CENTER

Shop online from our wide range of *air rifle parts* and *accessories* using our new performance center catalogue. Our range of airgun accessories has been designed, developed and tested in conjunction with Daystate and BRK's quality values to ensure we supply the highest quality accessory that work perfectly with Daystate and BRK rifles. Our accessory range allows you to personalise your rifle to suit your individual style but also caters for those functional spares. Whatever you need, the Performance Center has it!

All parts supplied from our UK warehouse. To find our accessories, parts and to order just scan the QR code or visit

https://issuu.com/daystate/docs/performance_center_001?fr=xKAE9_zU1NQ



Brocock Ltd, Unit 3, Raleigh Hall Industrial Estate, Eccleshall, Staffordshire ST21 6JL, United Kingdom office@brocock.co.uk brocock.co.uk



BRK GHOST UPGRADE SPRING FITTING INSTRUCTIONS

The Hammer Spring Power Tuning Kit allows BRK Ghost shooters to fine-tune their rifle for shooting different pellets or slugs.

This is a genuine BRK Brocock Performance Center upgrade.

SUITABILITY

For all 'export' or Hi-Power (HP) models. The kit comprises six, color-coded springs of pre-set tensions, as fitted at the factory to the following configurations.

430mm barrels

WHITE.177 / 4.5mm rated up to 12 ft/lbsWHITE.22 / 5.5mm rated up to 20 ft/lbsBLUE.177 / 4.5mm rated up to 20 ft/lbsBLUE.22 / 5.5mm rated up to 45 ft/lbs

600mm barrels

 RED
 .177 / 4.5mm rated up to 31 ft/lbs

 RED
 .22 / 5.5mm rated up to 61 ft/lbs

 RED
 .25 / 6.35mm rated up to 70 ft/lbs

 BLACK
 .30 / 7.62mm rated up to 95 ft/lbs

Special barrels

GREEN .22 (711mm RACE edition) YELLOW HP+ models



Ensure gun is unloaded and rifle is not cocked!

TO FIT

Remove 4x3mm securing screws. Note: this is anti-tamper on many UK spec models and 3mm on other regions. The lower screws can be accessed by lowering the butt pad.



Remove rear body assembly.



Remove power wheel.



Remove spring and replace with spring of a different rating.



Replace power wheel not orientation of ball bearing that must match with the ball bearing groove.

Replace rear housing.

